


Extreme Grounding Point

To add extra “grounding” to the Extreme, you can ground the server using the below screw circled in red:

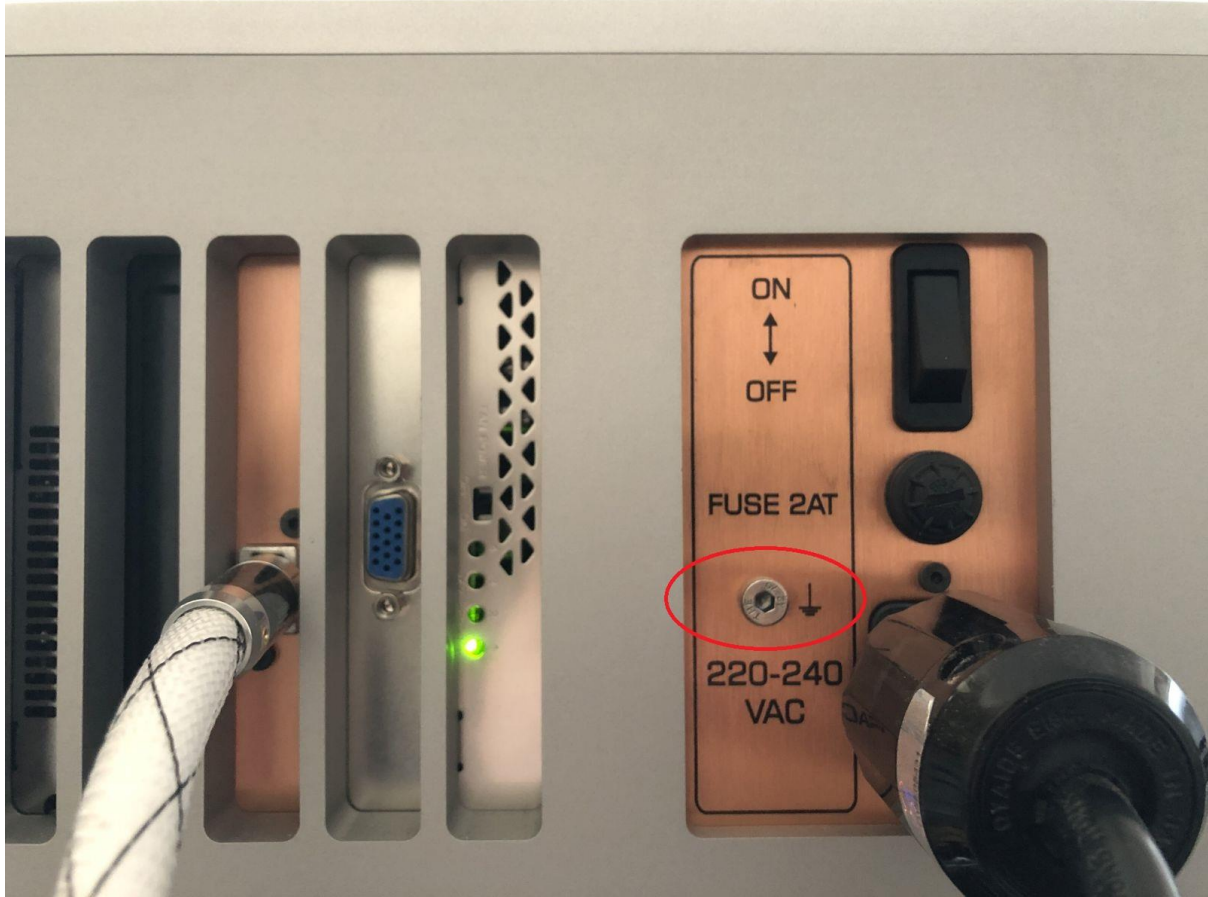


This screw connects directly to the copper plate which in turn connects to the chassis.

There is a low number of Extremes out there without this grounding point. If your server is one of these, then you can use one of the screws that bolts the bottom plate to the cooling fins. We would suggest removing the screw in the bottom plate far right underneath the power inlet.

In this case, you will need to obtain a longer screw.



Use a 4mm Allen key to remove the screw.

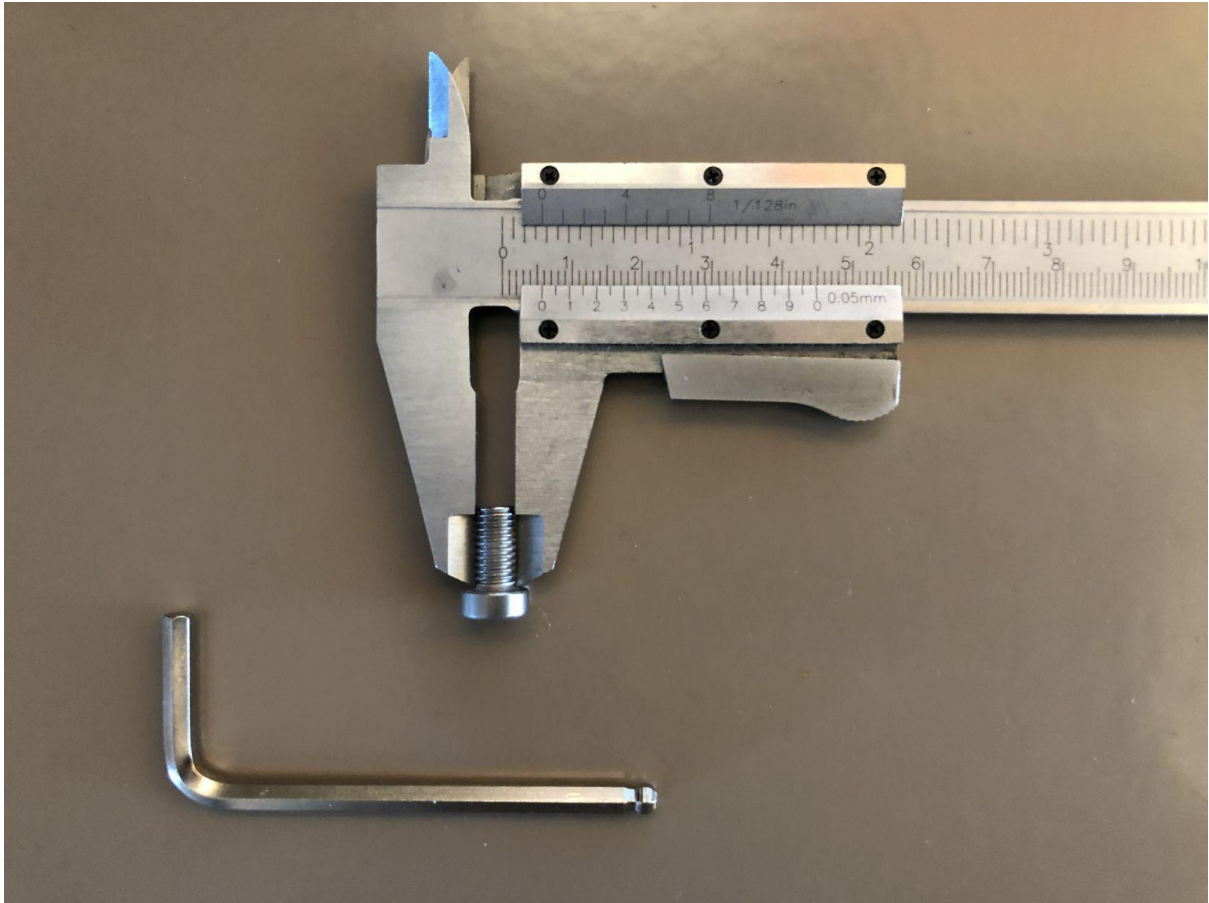

The screw has a standard DIN M6 thread. The required length depends on the thickness of your lug or spade. Compared to the current screws' length, you'll need an extra 5mm length + the thickness of your spade. So, that's 17mm + spade thickness. Please keep in mind that the screw head may not exceed 10mm.