



How to check the network connection speed

You can see the uplink speed in the Extreme Music Server's network adapter properties.

VNC to the Extreme, locate the start menu and right-click the windows icon. Mac users can either double-tap the Trackpad or use Control-Click. In the menu that pops up (which is different from the normal start menu), select Network Connections.

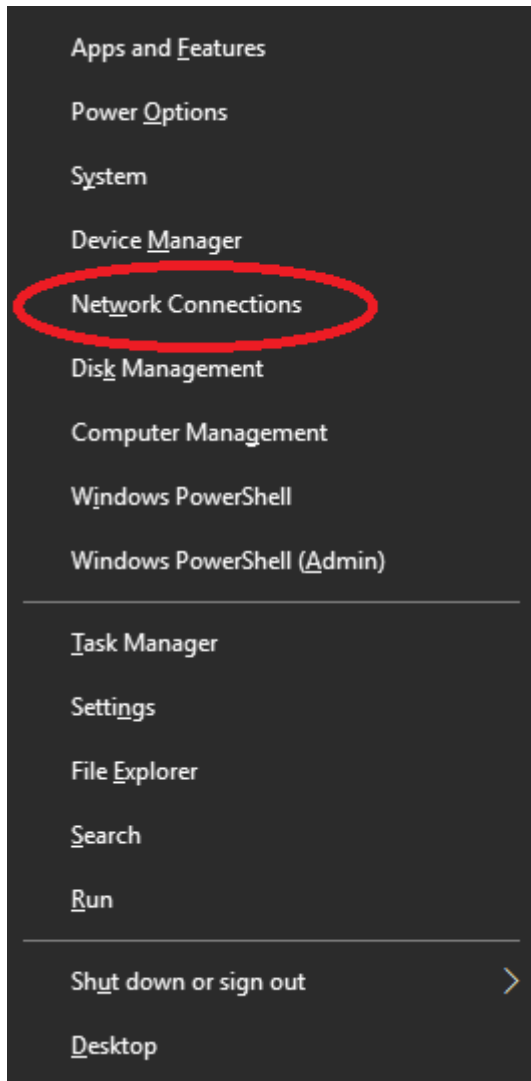


In the Network Connections popup, click "Change Adapter options".

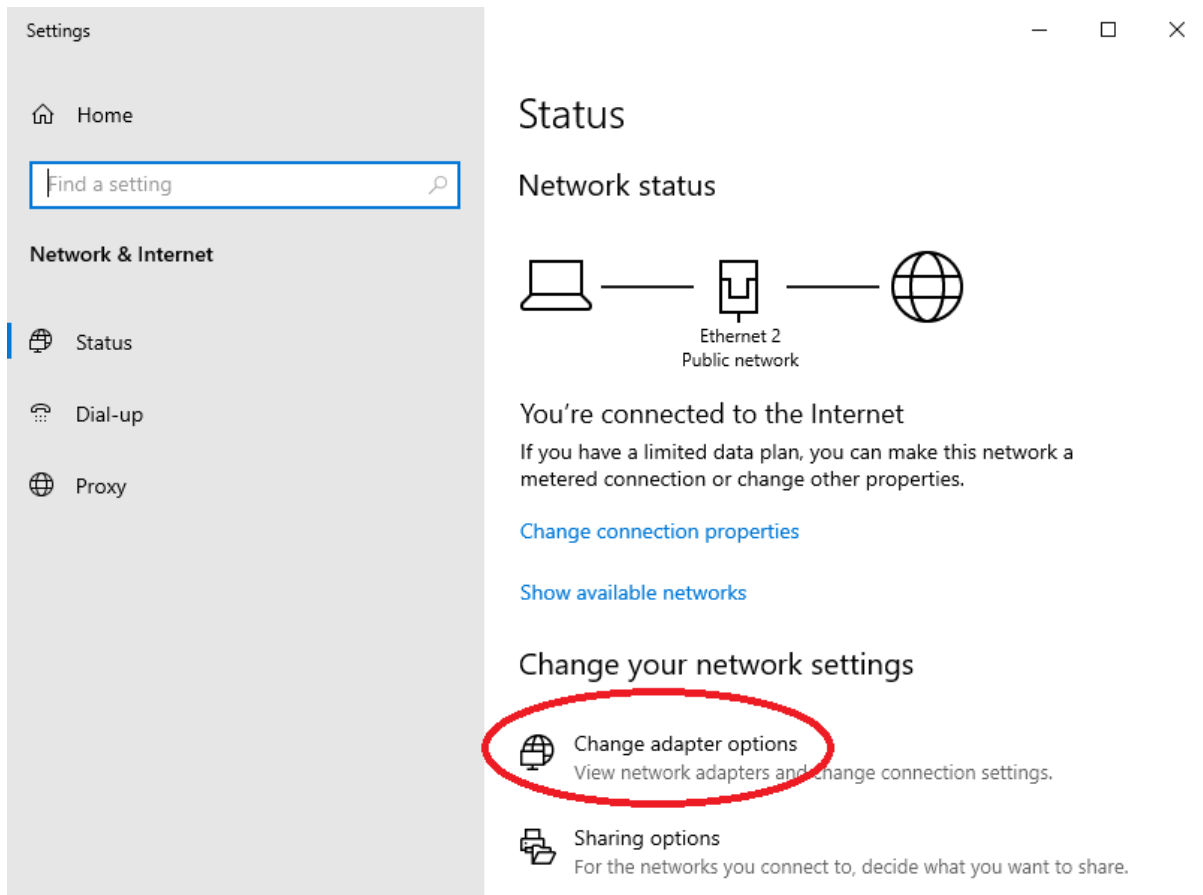

In the next popup, double-click the functioning Ethernet Connection (the one that does not have a cross), in this case Ethernet 2



The next popup shows the speed under the Connection header

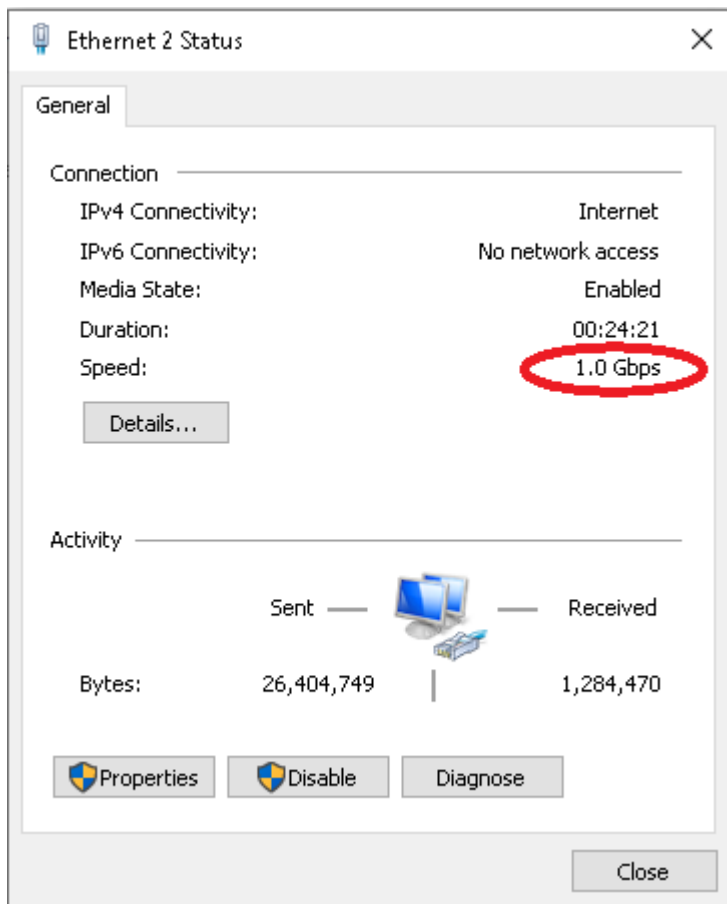

When done, simply click away all open windows with the top-right X.