

## Connect to the Extreme Router

The Extreme Router's Web Interface is accessible from any device that has Wi-Fi access and an internet browser, such as an iPhone, Laptop, or iPad, or their Android counterparts.


➔ Please note that the Router's interface is not accessible from your regular home network.

There are three ways to connect. In most cases, the first option is easiest.

1. Connect your tablet, phone, or laptop directly to the Extreme Router's Taiko Wi-Fi network.
2. Alternatively, you can connect a desktop or laptop to the Extreme Router via wired Ethernet, whilst making sure to be disconnected from the home network. The desktop or laptop will now receive a new DHCP address from the Taiko router.
3. Log onto the Extreme Music Server via VNC, start an internet browser, and go from there.

In an internet browser, type `http://192.168.100.1` to log in to the Extreme Router's admin web UI.

After entering the IP Address, you will see the following login screen:

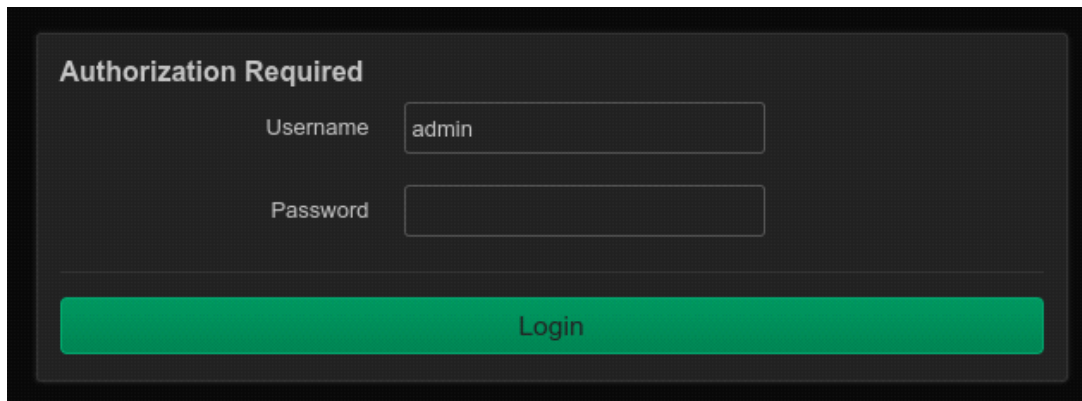

The screenshot shows a login interface with the following elements:

- Title: Authorization Required
- Username field: Contains the text 'admin'
- Password field: Is empty
- Login button: A large green button with the text 'Login'

To log in, use the following credentials:


- Username = 'admin' (not 'Admin' as indicated on some early labels)
- Password = located at the bottom of the Extreme Router

We have the passwords on file and can supply it if you cannot find yours. Please consider that you may have changed your password.


## Firmware update

To ensure the highest level of security we strongly advise always keeping the router software up to date. To indicate the availability of updates in the user interface, there is a 'FIRMWARE' button in the upper right corner. If it is **RED**, then a new update is available. If it is **GREY**, then the system has the latest updates installed and no action is required.


In the screenshot below, Firmware is shown as available:

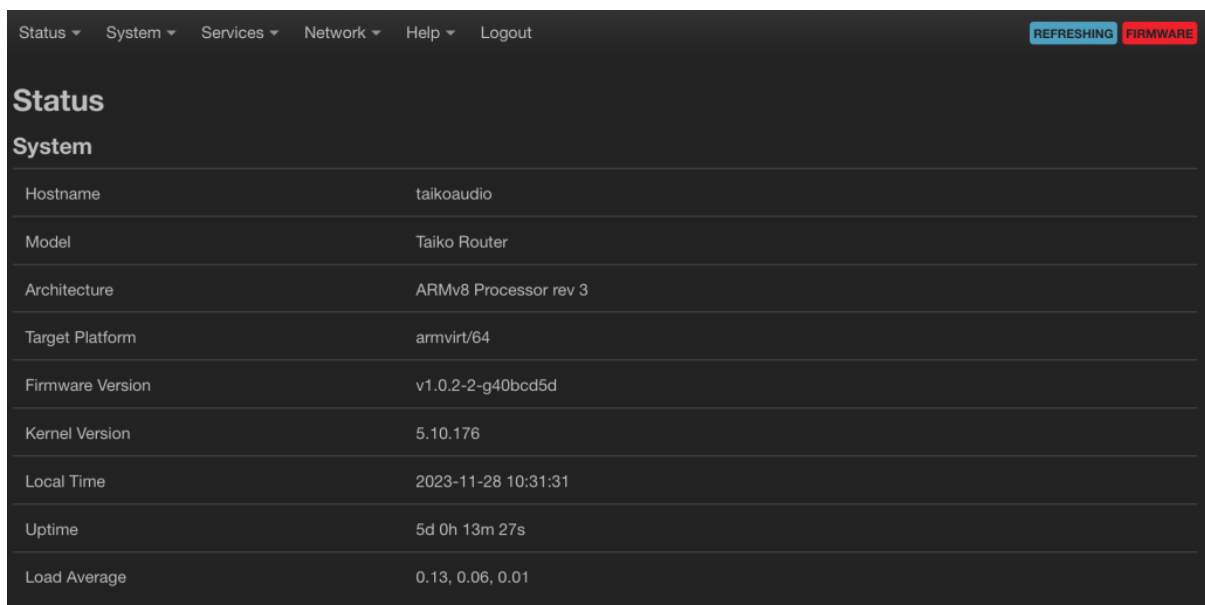


To update the firmware, click on the 'FIRMWARE' button or go to the 'System' menu, select 'Firmware Update' and click on the 'Check Update' button.

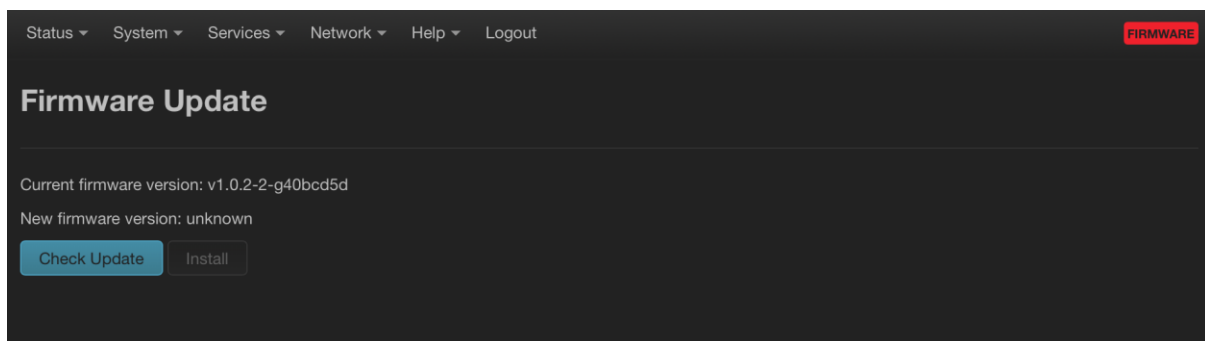


If the update is present, you can click the 'Install' button.

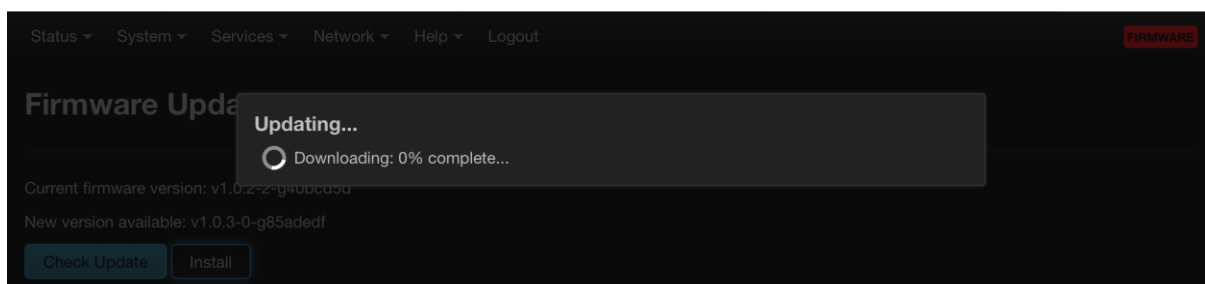

The update will auto-install:

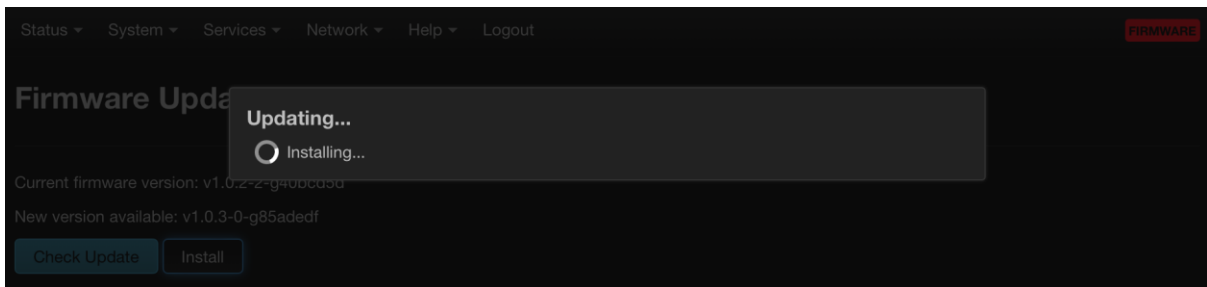


Then, the Router will be rebooted:

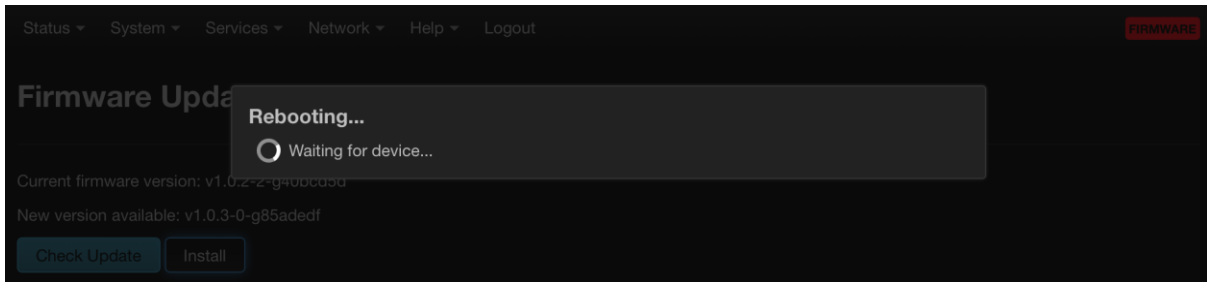

- ➔ Unless you made Taiko Wi-Fi your default (auto-connect) network, please note that the tablet, laptop, or phone may reconnect to your Home Wi-Fi when the Taiko Router's Wi-Fi shuts down as a result of the reboot. In that case, simply re-select Taiko Wi-Fi in your device's settings to continue. After a reboot, when you want to reconnect, you will have to log back into the Router's web interface using the same credentials.

When the Router has rebooted, please log in again with the same credentials as used before:

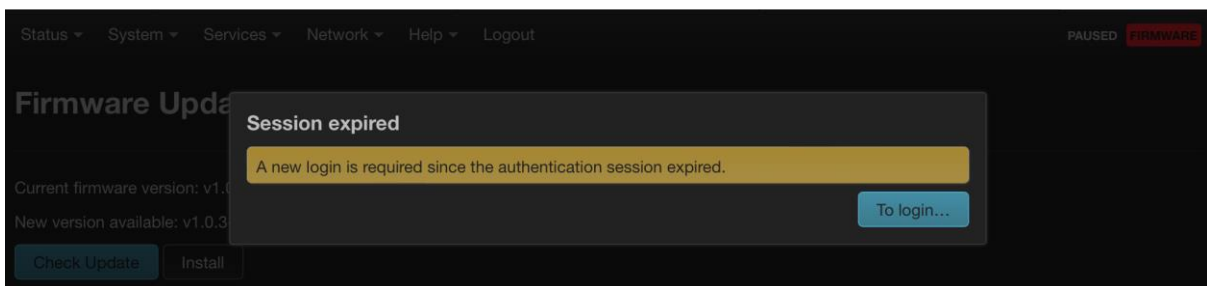

The grey FIRMWARE button top right indicates that the update has been completed successfully.

